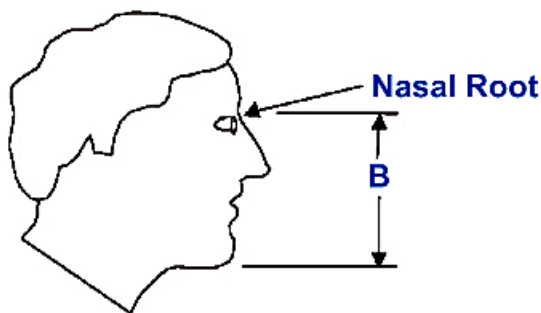



**Gentex MBU-12P**


To determine the "B" dimension  
 Nasal Root -deepest impression of  
 the nose line

Mask Size	Measurement B
X-Short	3.6in (91.44mm) - 4.0in (101.6mm)
Short	4.0in (101.6mm) - 4.4in (111.76mm)
Regular	4.4in (111.76mm) - 4.8in (121.92mm)
Long	4.8in (121.92mm) - 5.1in (129.54mm)
X-Long	5.1in (129.54mm) - 5.5in (139.7mm)

**Gentex MBU-20P**


To determine the "A" dimension, facial  
 muscles are relaxed and the jaws are  
 closed.  
 Measure the maximum distance between  
 the corners of the mouth.

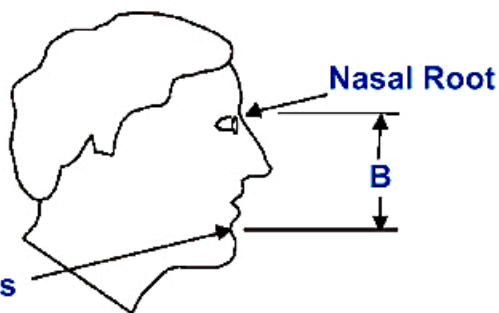

To determine the "B" dimension  
 Nasal Root -deepest impression of the nose line  
 Supramentals-deepest impression between the  
 lower lip and the chin

Mask Size	Measurement A	Measurement B
Small Narrow	2.13in (54.1mm)	3.375in (85.72mm)
Medium Narrow	1.96in (49.78mm)	3.375-3.875in (85.72-98.42mm)
Medium Wide	2.46in (62.48mm)	3.375-3.875in (85.72-98.42mm)
Large Wide	2.46in (62.48mm)	3.875in (98.42mm)